

Quick Keys – Model View	
2D Plan View	V2
3D Quick View	VQ
Aligned Dimensions	DAL
Appliances	IF
Arc – 3 Points	A3
Area/Perimeter	AP
Auto Interior Dimensions	DAI
Cabinets	IC
Catalog Manager	CM
Ceiling by Room	CR
Circle – Center Radius	CI
Doors	WD
Exit	CTRL + Q
Exterior Accessories on Location	EA
Find and Replace	CTRL + F
Floor by Room	FR
Framing Mode On/Off	CTRL + D
Insert View	IV
Interior Accessories	IA
Interior Lighting	IL
Line	L
Linear Dimensions	DLI
Measure	DI
New	CTRL + N
Open	CTRL + O
Openings	WO
Plants	P
Plumbing Fixtures	IP
Polygon Hatch	BH
Print	CTRL + P
Program Settings	SS
Redo	CTRL + Y
Room Region by Room	RR
Save	CTRL + S
Select All	CTRL + A
Strip Footings Attached to Walls	WF
Text	TT
Text with Leader	TL
Undo	CTRL + Z
View Filter	VF
View Manager	VM
Walls	WA
Windows	WW
Zoom Previous	ZP
Zoom Realtime	ZR
Zoom to Fit	ZE
Zoom Window	ZW

Quick Keys – Worksheet	
Aligned Dimensions	DAL
Angular Dimensions	DAN
Arc – 3 Points	A3
Array	AR
Boundary Hatch	BH
Break	BR
Circle – Center Radius	CI
Define Block	BB
Delete	ER
Delete Unreferenced Blocks	PU
Duplicate	CP
Edit Block Attributes	ATE
Exit	CTRL + Q
Explode	X
Extend	EX
Fillet	F
Insert Attribute	ATT
Insert Block	IB
Insert Block from File	IF
Insert CAD File	IC
Insert Model View	IV
Line	L
Linear Dimensions	DLI
Measure	DI
Mirror	MI
Move	MM
New	CTRL + N
Offset	O
Open	CTRL + O
Print	CTRL + P
Program Settings	SS
Redo	CTRL + Y
Rotate	R
Save	CTRL + S
Scale	SC
Select All	CTRL + A
Stretch	ST
Text	TT
Text with Leader	TL
Trim	TR
Undo	CTRL + Z
View Manager	VM
Zoom Previous	ZP
Zoom Realtime	ZR
Zoom to Fit	ZE
Zoom Window	ZW

Tip: To customize Quick Key assignments or assign Quick Keys to other commands select **Settings > Program Settings > Keyboard**.